



On some manifolds, this thermostat may not open fully with an original heater valve installed. The distance from the front of the manifold casting (where the thermostat is installed) to the edge of the hole for the heater valve must be 1.5" minimum. If both parts are used and the distance described is less than 1.5", remove the heater valve and cut the tube off to no longer than 3/8" past the threads.