


CLASSIC AUTO SUPPLY CO., INC.

Spark Plug Wire Installation

Thank you for purchasing our reproduction spark plug wire set. This set is long lasting and great attention to authenticity has been taken to make sure that you get the most accurate reproduction available. We have provided the installation directions below for your reference. If you have any further questions regarding how to install your new plug wires please call our tech help line at 740/622-9700.

- Using the table at right, measure and mark the dimension "A" and "B" on each wire using a magic marker. All measurements are made from the distributor end of the wire.

- Locate part number 12297A grommet (4 holes in a square) and insert spark plug wires 1, 2, 3, and 4 in the positions shown. Note that drawings are made looking toward the spark plug. Note placement of conduits.

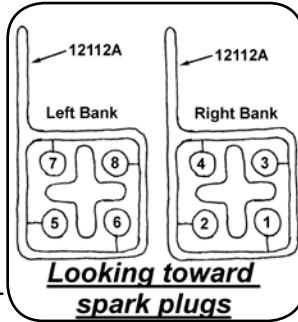


Wire#	INCHES		CONDUIT	
	A	B	Short	Long
1	19 3/4	10 3/4	yes	yes
2	20 1/4	11 1/2	yes	yes
3	23	14	yes	no
4	20 1/2	11 1/2	yes	no
5	29 1/4	17 1/2	no	yes
6	28	16 1/4	no	yes
7	29 1/4	17 1/4	no	no
8	30 1/2	18 1/2	no	no

- Adjust each wire so that the "A" mark you made on the wire is even with the grommet on the distributor side. Make this adjustment before installing the bracket 12112A.

- Clamp wires in place by closing bracket 12112A around rubber grommet. Note the orientation of the bolt tab with respect to the numbered wires.

- Repeat the above steps for wires 5, 6, 7, and 8.

- Insert plug wires 1, 2, 3, and 4 into grommet 12297B (4 holes in a row) as shown at right. Note placements of conduits.

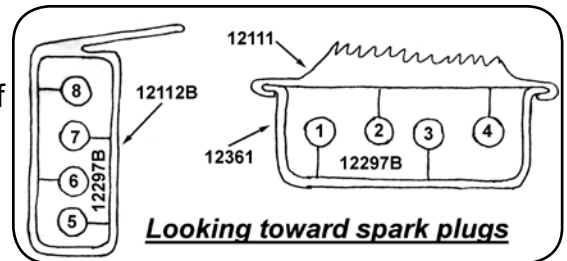

- Adjust each wire so that the "B" mark you made on the wire is even with the grommet on the distributor side. Make this adjustment before installing the bracket.

- Clamp wires in place by installing by installing clamp 12361 and then inserting clamp 12111. Note position of wires. The extension on 12111 should point toward the distributor end of the wires.


- Repeat steps 5 and 6 for wires 5, 6, 7, and 8.

- Clamp wires in place by clamping bracket 12112B around grommet 12297B. Note position of clamp.


- Insert plug wires into distributor cap in the order shown.

- Bolt 12212A, 12212B, and 12111 clamps to the engine block.

- Attach plug wires to the spark plugs and connect coil wire between coil and distributor cap.

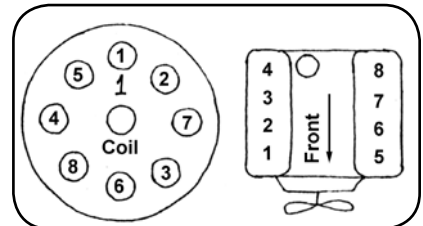

- Start engine to check for satisfactory performance and then remove id tags from the end of the wires near distributor cap.

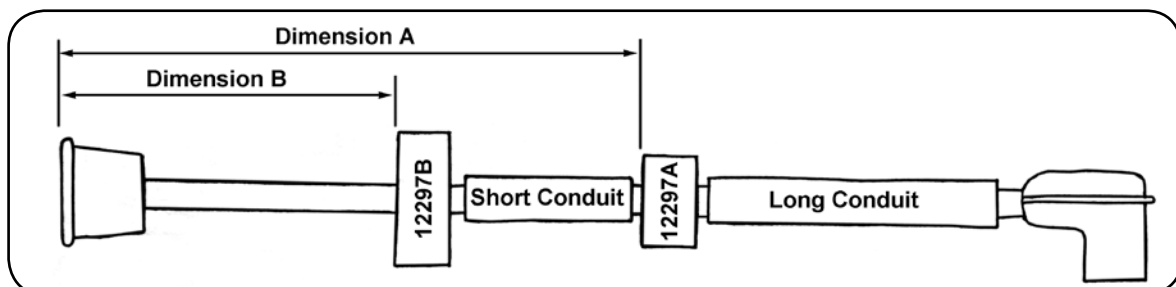



**Rear Middle
of Block**



**Passenger Side
Rear of Head**



Driver Side Rear



**Passenger Side
Rear**